
StepLight RECTANGULAR HORIZONTAL WALL INSTALLATION INSTRUCTIONS Luminaires de marche DIRECTIVES D'INSTALLATION AU MUR RECTANGULAIRE HORIZONTAL


Warning: Every Axis Lighting fixture undergoes quality testing. Should an LED board not work properly, please turn fixture off and contact Axis technical support at 1-800-263-2947 for immediate assistance.


Avertissement: Chaque luminaire d'Éclairage Axis sont soumis à des tests de qualité. Si une carte DEL ne fonctionne pas normalement, veuillez couper l'alimentation et contacter le support technique d'Axis au 1-800-263-2497.

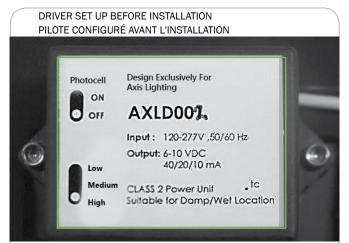

SET UP INTENSITY AND PHOTOCELL PRIOR TO INSTALLATION IN J-BOX, BY OTHERS.


CONFIGURER L'INTENSITÉ ET LA CELLULE PHOTOÉLECTRIQUE AVANT L'INSTALLATION DANS LA BOÎTE DE JONCTION, PAR D'AUTRES.

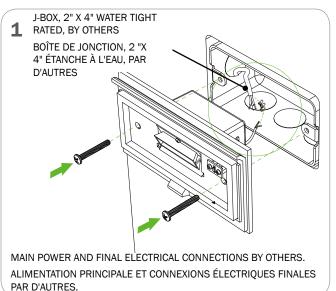


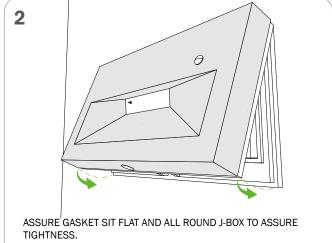

ASSUREZ-VOUS QUE LE JOINT EST BIEN À PLAT ET TOUT AUTOUR

DE LA BOÎTE DE JONCTION POUR ASSURER L'ÉTANCHÉITÉ.

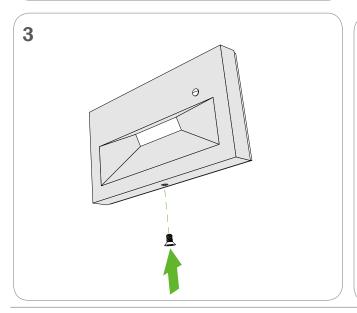

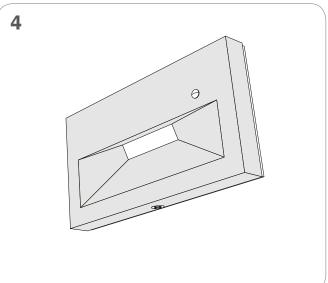

Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information. © 2018 Axis Lighting Inc. 1.800.263.2947 [T]514.948.6272



W A R N I N G: LOCATE ALL POWER CONDUITS AND CABLES. RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

